


3. Create Marriage Lines

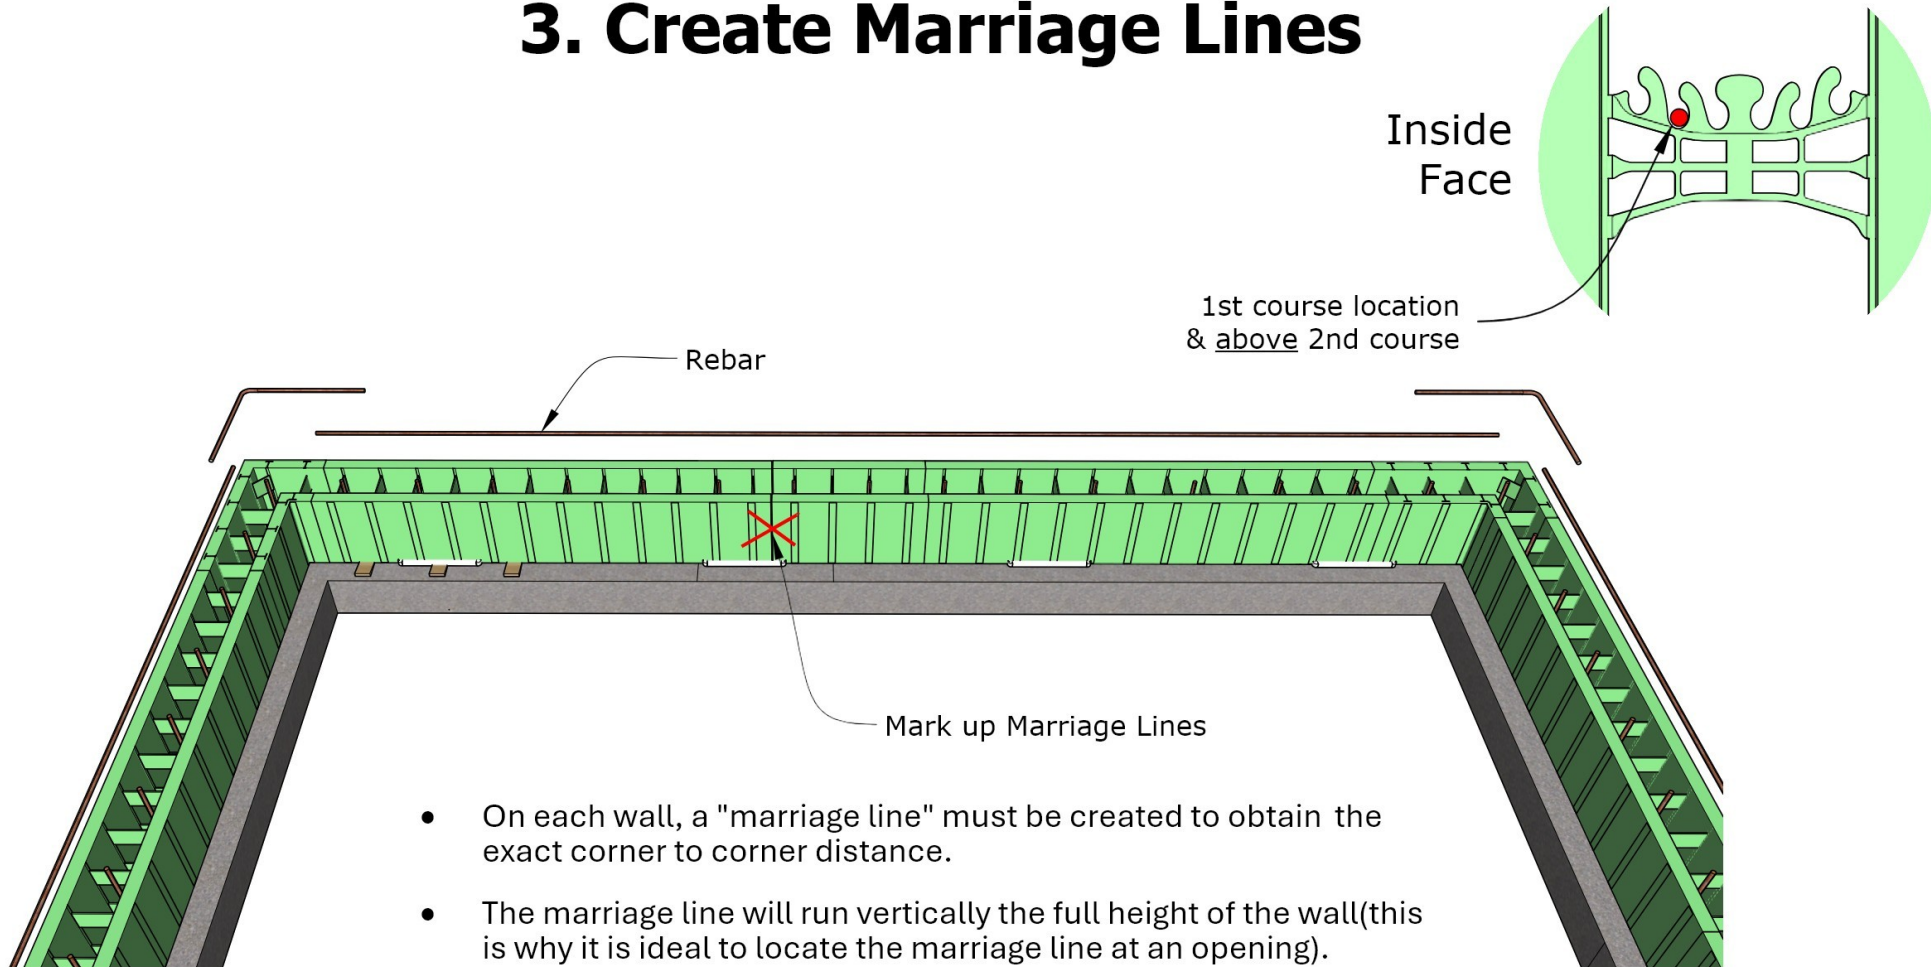

- On each wall, a "marriage line" must be created to obtain the exact corner to corner distance.
- The marriage line will run vertically the full height of the wall (this is why it is ideal to locate the marriage line at an opening).
- If the marriage line falls in the web of one of the blocks, cut the adjacent block two inches.
- Install the horizontal rebar as per engineering drawings. Use zap straps or tie wire to secure rebar overlaps.