




Tee Wall

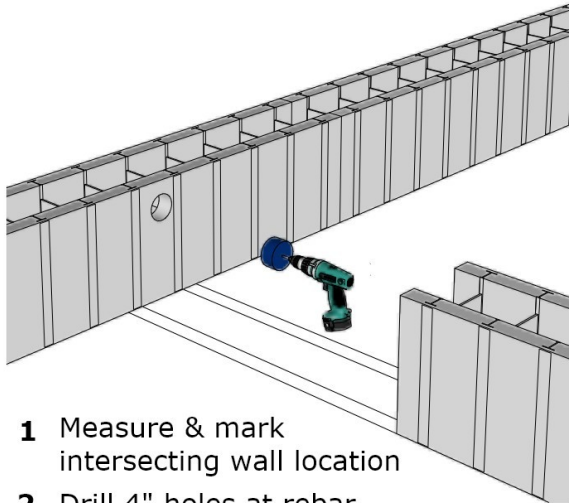


- 1 Measure & mark intersecting wall location
- 2 Drill 4" holes at rebar heights or remove full foam @ cavity (as specified by engineer)

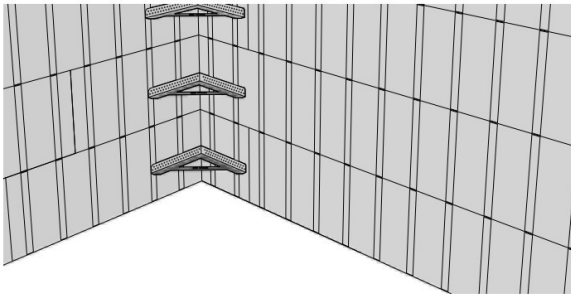


- 3 Attach intersecting wall to flanking wall using ZEE brackets at each block layer
NOTE: Face bracket downwards to avoid catching concrete overspill

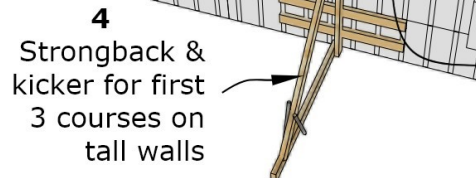

- 4 Strongback & kicker for first 3 courses on tall walls

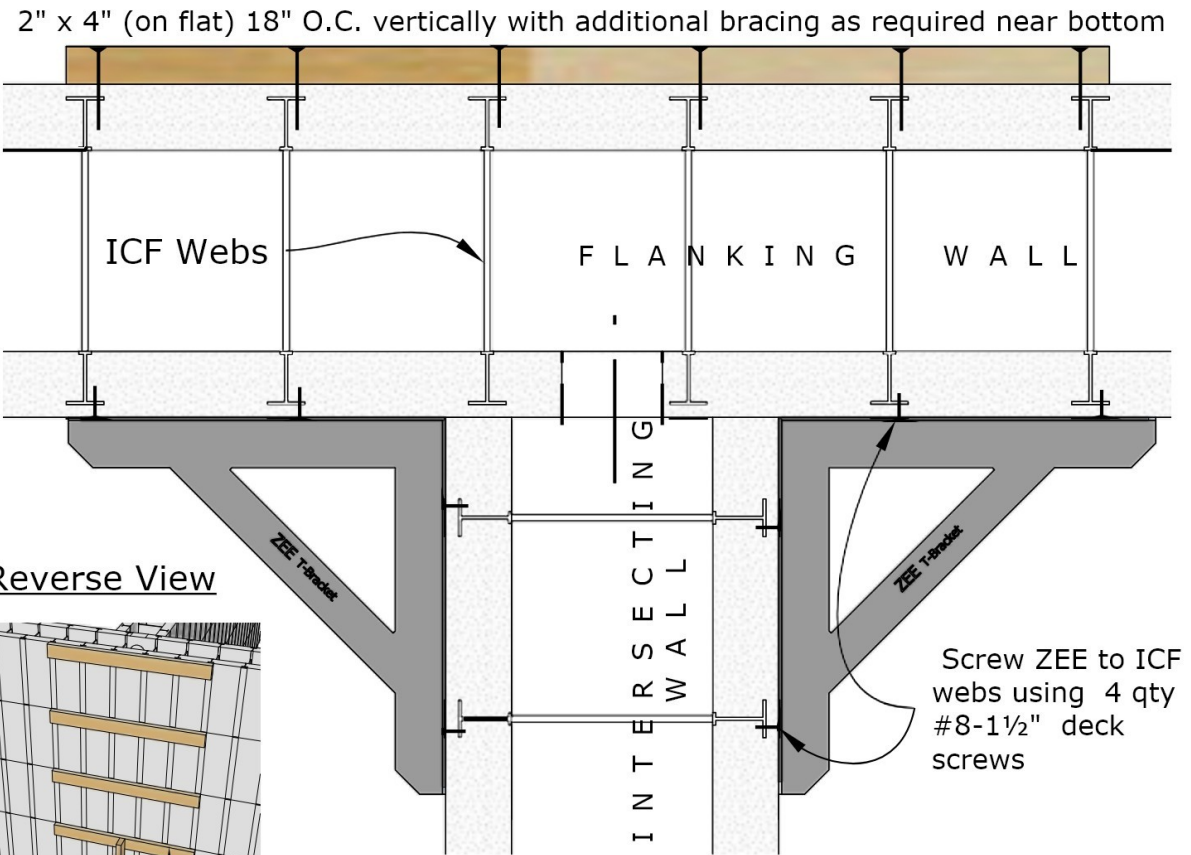

Plan View

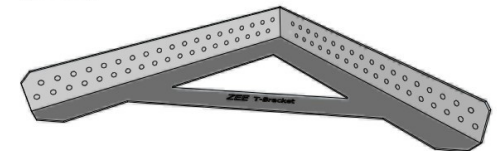

ZEE T-Bracket