




4. Install Second Course

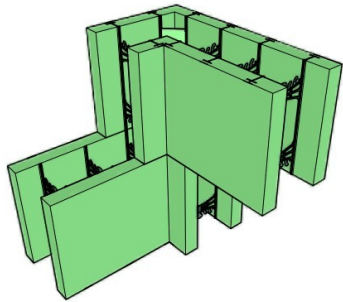

Inside
Face

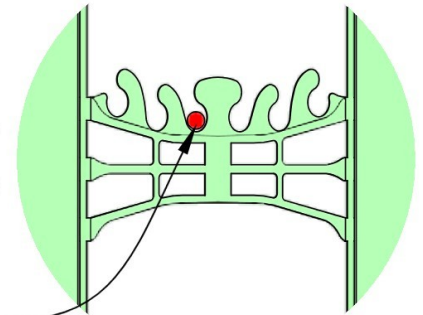

2nd Course Location

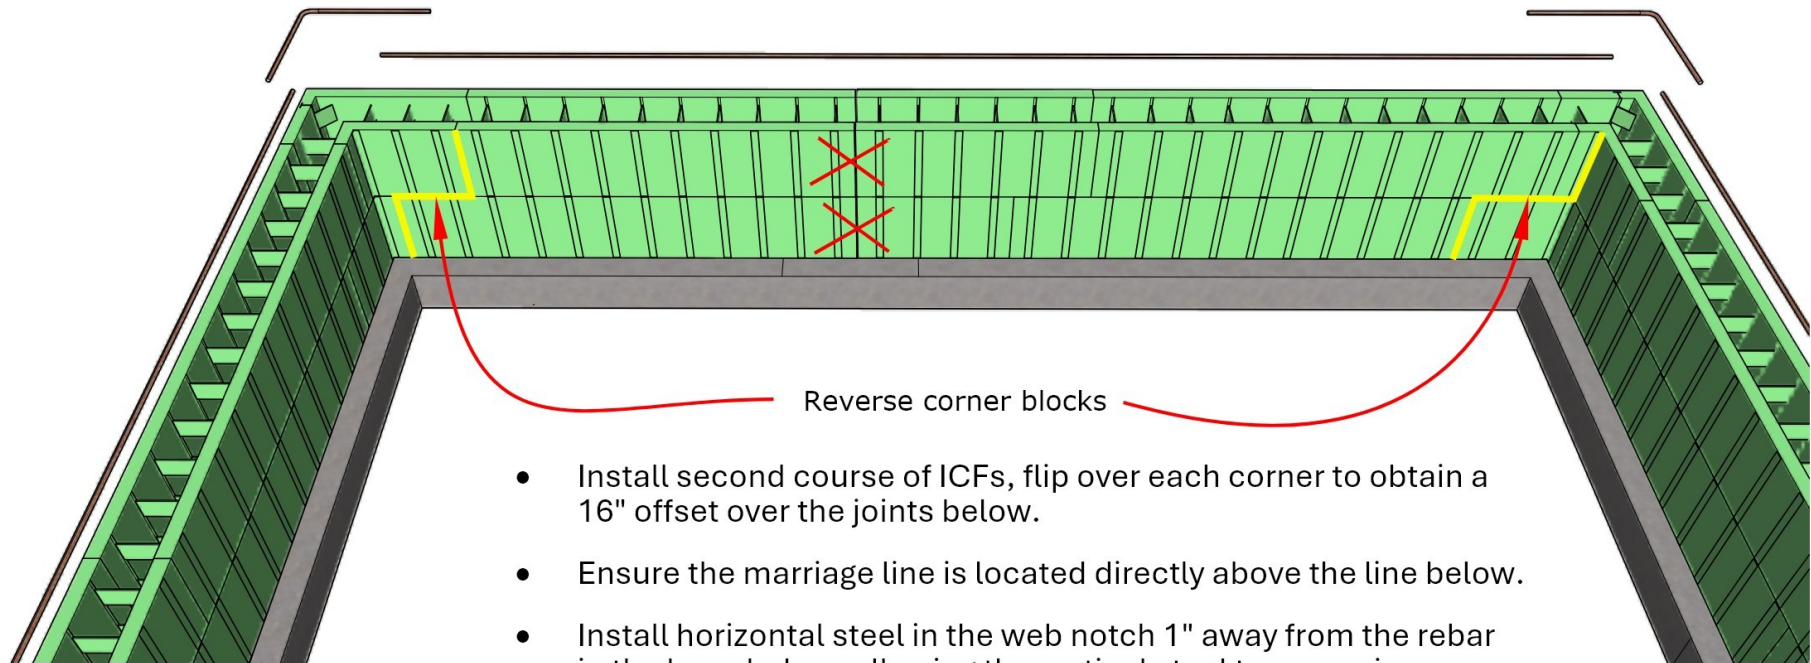

Reverse corner blocks

- Install second course of ICFs, flip over each corner to obtain a 16" offset over the joints below.
- Ensure the marriage line is located directly above the line below.
- Install horizontal steel in the web notch 1" away from the rebar in the layer below, allowing the vertical steel to weave in between the horizontal rebar.
- Only on 2nd course, afterwards all rebar back to second position.