


5. Level, plumb and foam glue

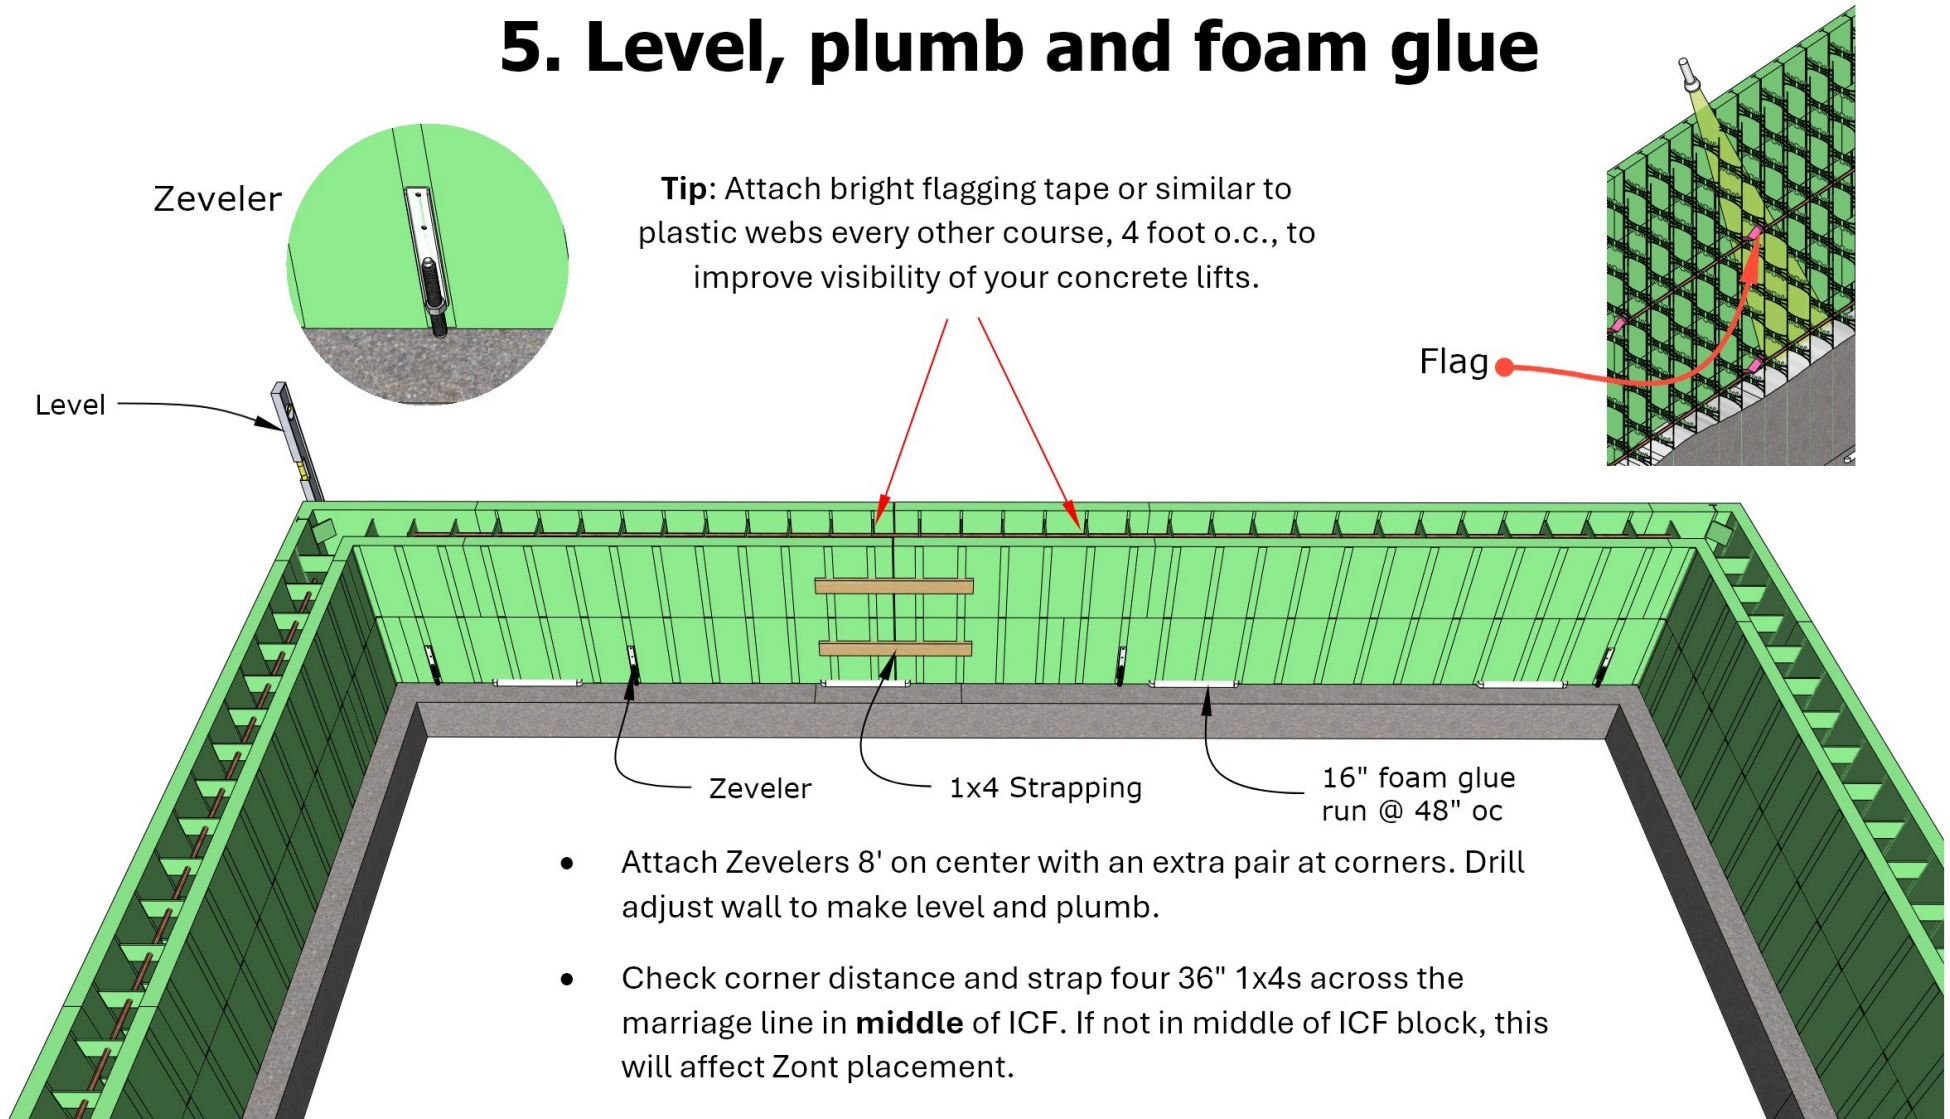

- Attach Zevelers 8' on center with an extra pair at corners. Drill adjust wall to make level and plumb.
- Check corner distance and strap four 36" 1x4s across the marriage line in **middle** of ICF. If not in middle of ICF block, this will affect Zont placement.
- Foam ICF to footing, 16" inch length, 48" on centre, both sides, to hold the base in position and prevent uplift. 10 minutes later foam all of the wall to prevent uplift.