


6. Install Zont Bracing

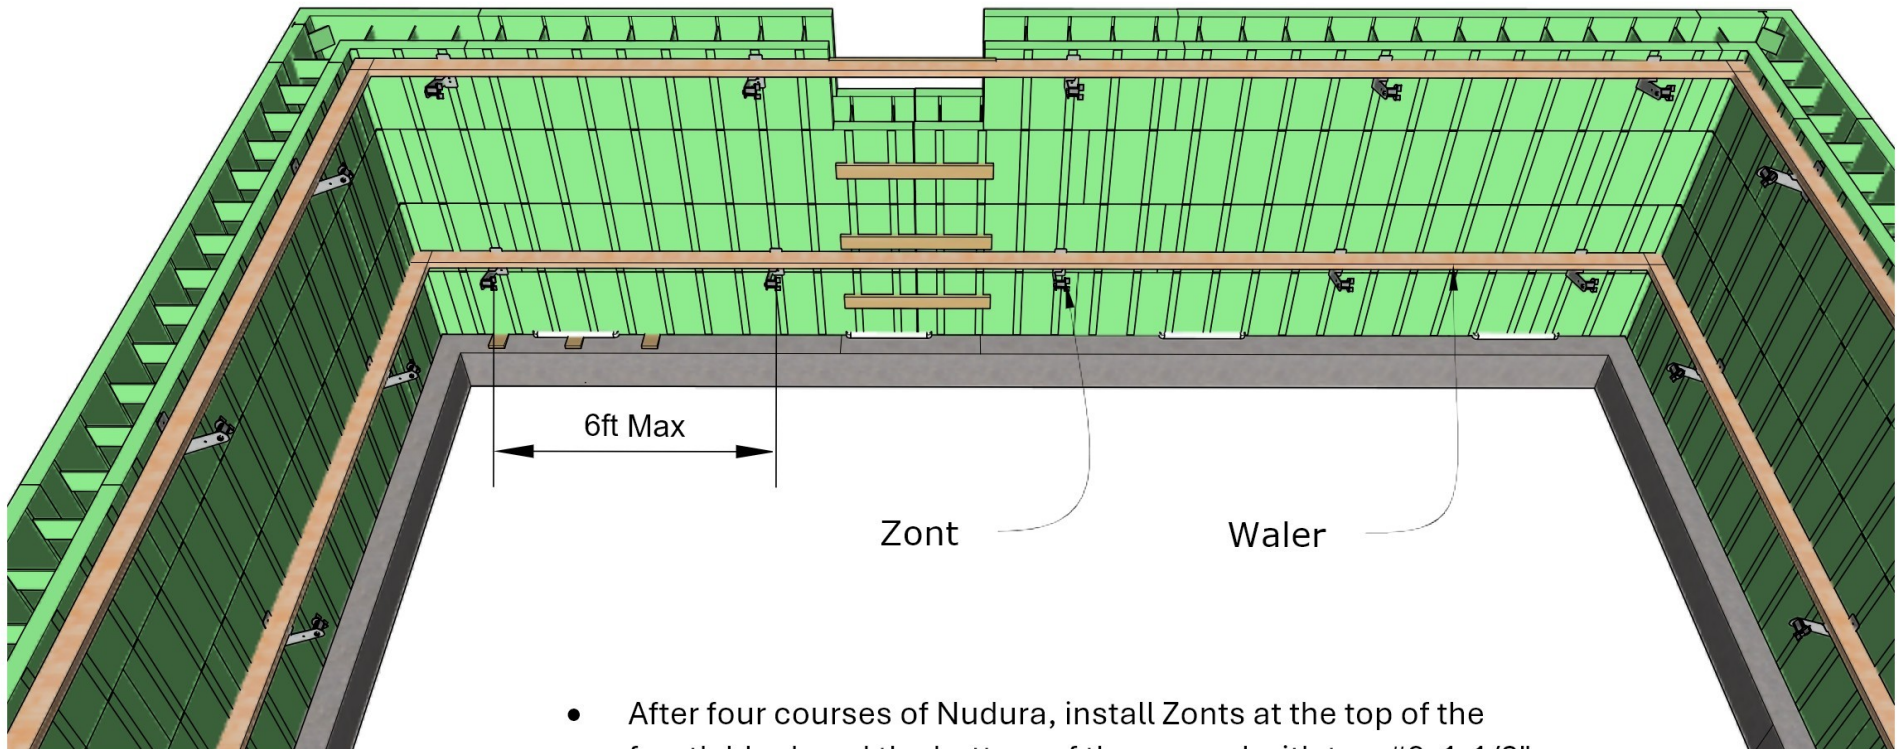

- After four courses of Nudura, install Zonts at the top of the fourth block and the bottom of the second with two #8x1-1/2" deck screws. Place Zonts two webs from corners and on 5' on centre.
- Place straight 2x4 walers in Zont saddles, scab 4' 2x4 over joints.