


Steps & Point load FASTFOOT


Stakes driven firmly into the ground to eliminate any & all settlement @ 4' OC minimum

1

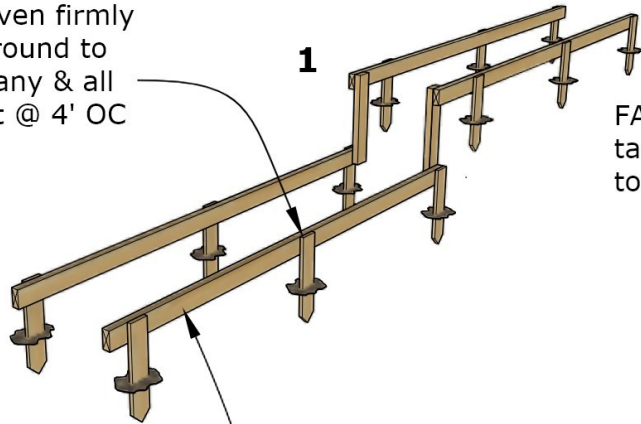

FASTFOOT® tack hammered to screeds


2

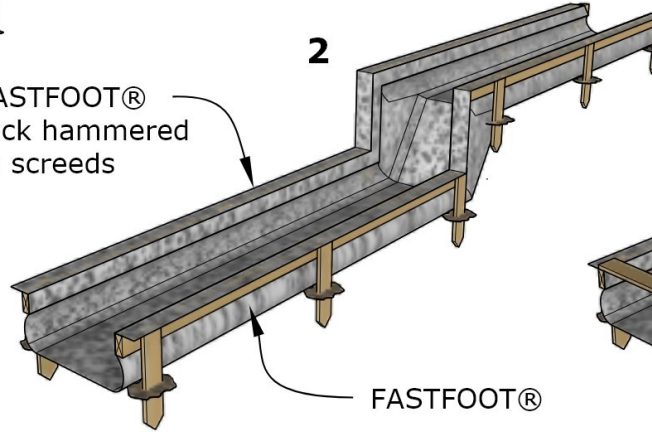

FASTFOOT®

1x4 cleats @ 4' OC

3

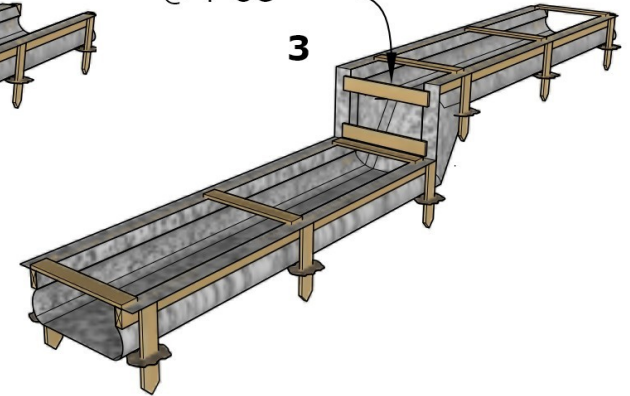

2x4 screed boards leveled to 1/4" accuracy. Attach firmly with 2½-3" screws or duplex nails

