

ICF Wall Preparation for Peel & Stick



After pouring concrete, use a garden hose to wash down ICF walls.

ALLOW TO DRY BEFORE INSTALLING!

ALTERNATIVELY

Brush down ICF walls to remove dust & dirt

IF the ICF has been exposed to sunlight for long periods, has discoloured & become powdery on the surface, **PRIMER** should be used.
[Apply with relative humidity BELOW 75%]

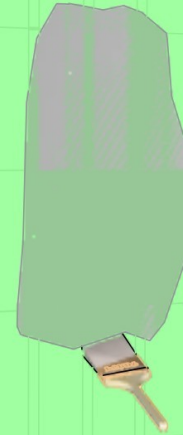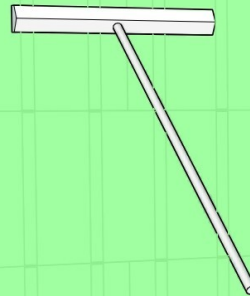

Use Primer if waterproofing is required.