

Peel & Stick Installation

INTERNAL CORNERS

Cut 16" to 24" by full width strips. Fold in half. Start at the bottom & after removing the paper backing, install, in shingle fashion up the wall. Apply equally & evenly to both sides. Make sure to apply into the corners to no air pockets are left behind.

USE 2 PEOPLE.
INSTALL ONLY ON DRY SURFACES.
ENSURE FULL CONTACT WITH WALL SURFACE BEHIND USING HAND OR PLASTIC ROLLER

The top edge of the membrane and where the membrane meets with the concrete footing must be sealed with a mastic/sealant which is compatible with polystyrene.

Use siding batten to top edge to prevent peeling away


Hardieplank or similar material to protect exposed above grade ICF

EXTERNAL CORNERS

Cut full width to height required. Fold in half. Start at the top & after removing the paper backing, install, downwards. Apply equally & evenly to both sides. Make sure to apply into the corners to no air pockets are left behind.

Intall dimple board per manufacturer's instructions

Overlap 3 inches

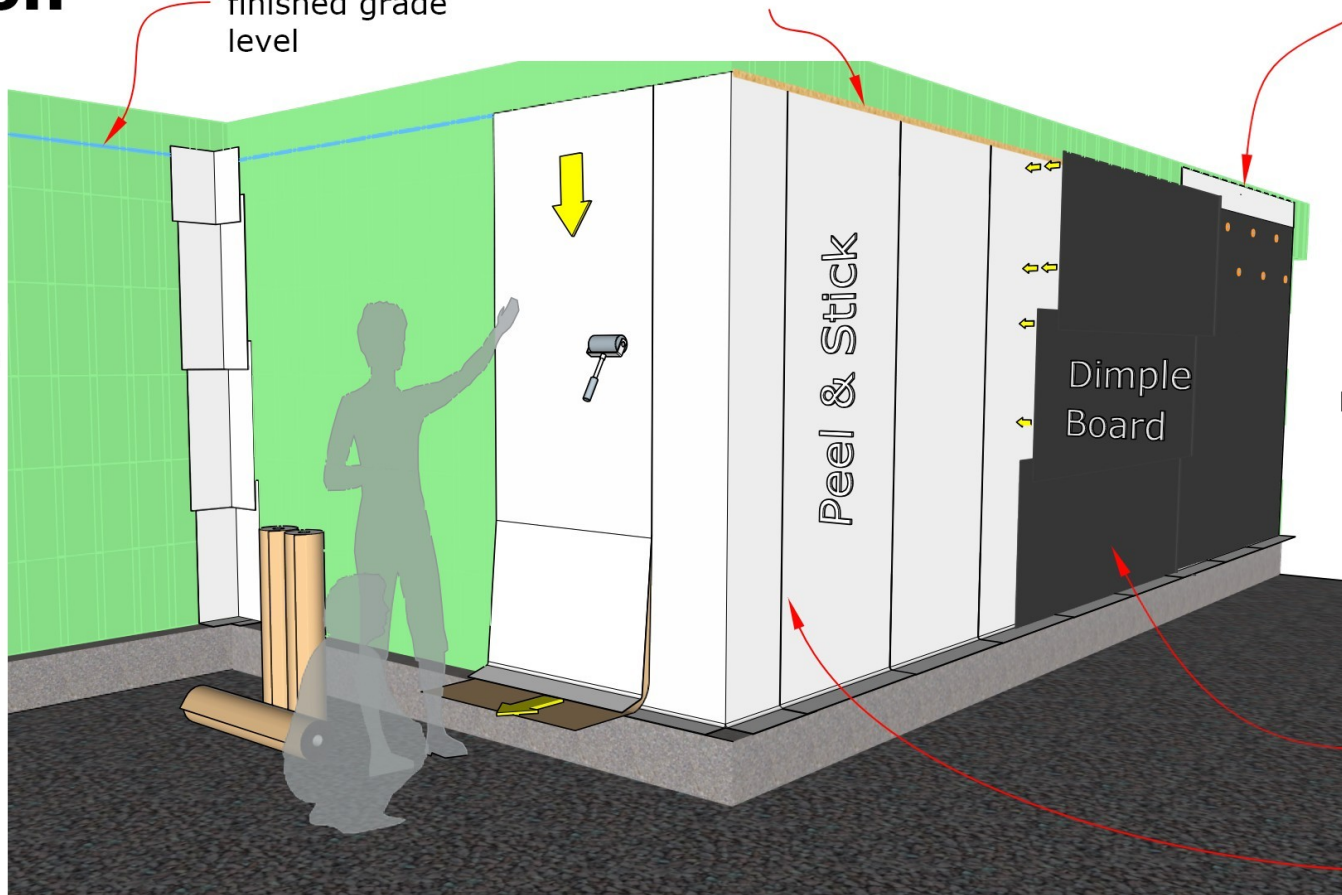

WORKING TEMPERATURE 2°-38° C (35°-100° F)

PEEL & STICK: Self-adhesive waterproofing membrane specifically for application to ICF. It is designed for below grade use only.
Supplied in rolls, 36" wide. Coverage 225 sq ft, 210 sq ft net.