
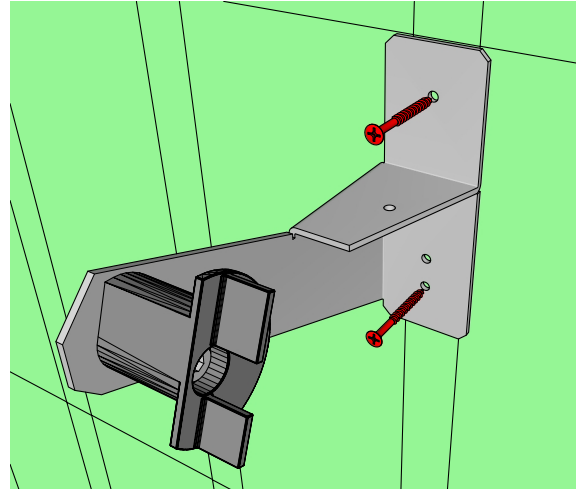


6. Install Zont Bracing

- Attach a minimum of 2 Zonts for walls up to 8' tall.

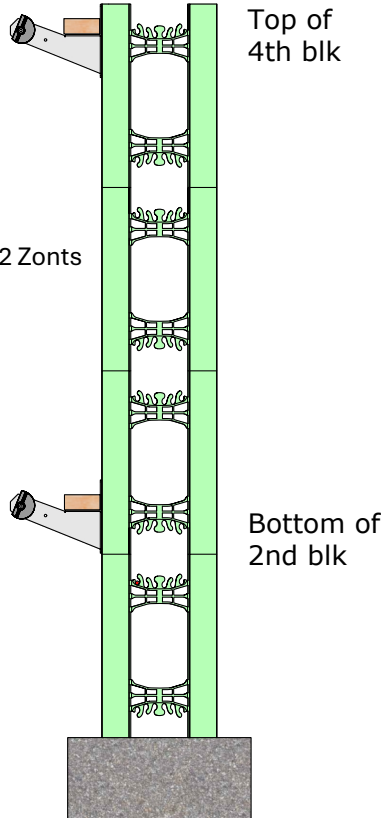

- Attach Zont to web with qty 2 x #8-1.5" wood deck screws. (Third hole is if one screw strips).